

Mark and print your ballot using the Accessible Writer



- ▶ The ballot marking device is touch screen operated or you may use it to mark your ballot by connecting your headphones, tactile buttons or other assistive devices
- ▶ Follow the instructions on the screen to mark and print your ballot
- ▶ Your ballot will print on the attached printer
- ▶ When finished, vote your ballot on the Verity Screen

1

Select **To get started, touch here.**



2

If you'd like to use audio/accessible features, you may choose to do so now.



3

When ready, select **Begin Voting.**



4

Select your choice; select **Next** to go to the next contest.



5

Review your ballot. When you're ready, select **Print.**



6

Retrieve your printed ballot and take all sheets to the scanner to cast your ballot.

